


Waterproof Connector Installation Method

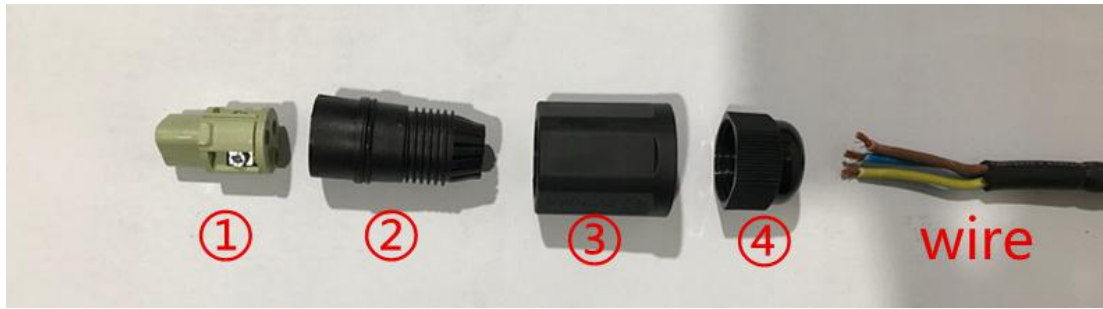

Step 1: Prepare a wire, and connect the part ① with wire, please make sure L to L, N to N, grounding wire to grounding wire, and tighten the screws on part ① as below figure 1 and figure 2 show:

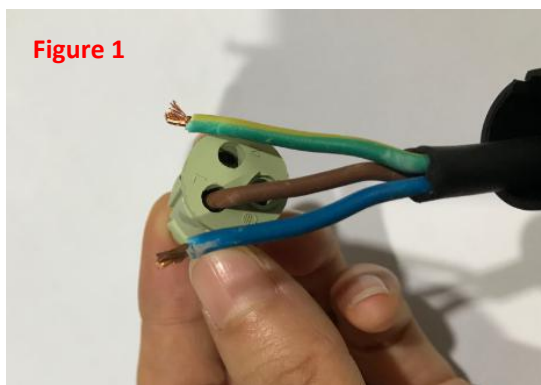


Figure 1

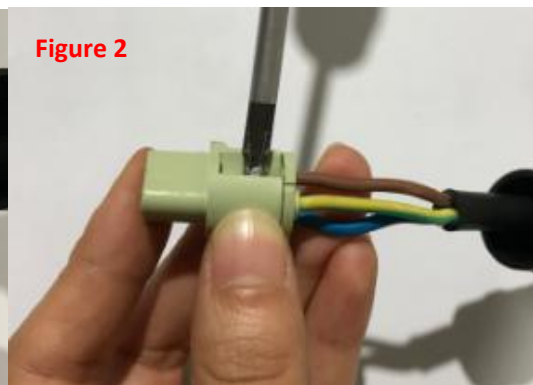


Figure 2

Step 2: Put all the parts(①②③④) on the wire in order, as below figure 3 show:

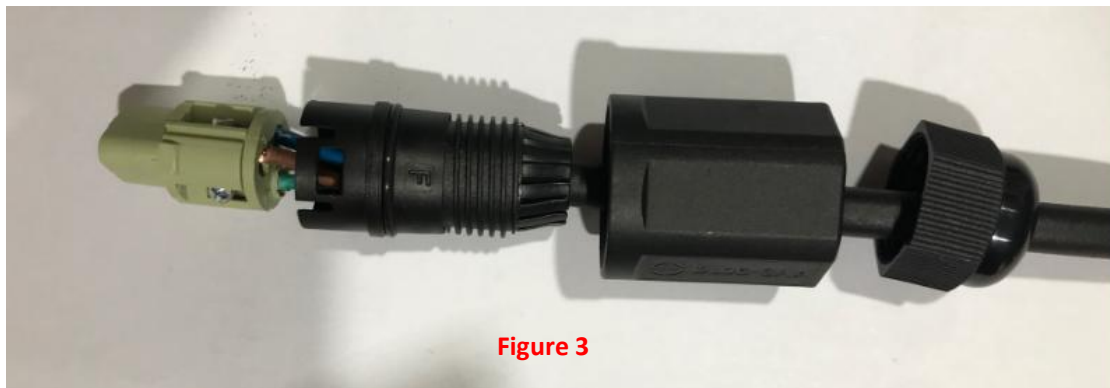


Figure 3

Step 3: Tighten all the parts(①②③④) on wire, finally as below figure 4 show, then plug it on the lamp as figure 5 show.



Figure 4



Figure 5